



# **SUPER** | CIRCUITS

---

## **LCD Monitor User Manual**

Products: LCD17-5, LCD19-5, LCD19W-7, LCD22W-7



Please read this manual before using your monitor, and always follow instructions for proper use. Please save this manual for future reference.

## WARNING

Risk of electric shock. Do not open.

To reduce the risk of electric shock, do not remove cover (or back). No user serviceable parts inside. Refer servicing to qualified service personnel.



### WARNING

*This monitor is equipped with a power plug with ground. Use only with a grounded electrical outlet. Always follow the instructions in the installation guide when applying power. Fire and equipment damage can occur if power is applied incorrectly.*



### CAUTION

*Operate this monitor only in environments where the temperature and humidity is within the recommended range. Operation outside the recommended range may cause electric shock and shorten the life of the product.*



### CAUTION

*The slots on the back of the monitor are provided for ventilation. Do not cover these slots or obstruct the airflow around or through the enclosure.*



### CAUTION

*Do not place the monitor in locations where liquids can be splashed on it. Avoid touching or scratching the LCD screen.*



### CAUTION

*Disconnect the power cord and all other cables from this monitor if the following conditions exist:*

- The power cord is frayed or damaged*
- The machine has been dropped or the enclosure is damaged*
- When the monitor doesn't function normally*
- If liquid has been spilled into the interior of monitor*

*Refer repair to qualified service personnel.*

## LEGAL NOTICE

Supercircuits products are designed to meet safety and performance standards with the use of specific Supercircuits authorized accessories. Supercircuits disclaims liability associated with the use of non-Supercircuits authorized accessories.

The recording, transmission, or broadcast of any person's voice without their consent or a court order is strictly prohibited by law.

Supercircuits makes no representations concerning the legality of certain product applications such as the making, transmission, or recording of video and/or audio signals of others without their knowledge and/or consent. We encourage you to check and comply with all applicable local, state, and federal laws and regulations before engaging in any form of surveillance or any transmission of radio frequencies.

Other trademarks and trade names may be used in this document to refer to either the entities claiming the marks and names or their products. Supercircuits, Inc. disclaims any proprietary interest in trademarks and trade names other than its own.

No part of this document may be reproduced or distributed in any form or by any means without the express written permission of Supercircuits, Inc.

© 2010, 2011 Supercircuits, Inc. All rights reserved.  
 11000 N. Mopac Expressway, Building 300, Austin, TX 78759  
 Sales/Support: 1.800.335.9777 | Fax: 1.866.267.9777



## Table of Contents

|                  |  |           |
|------------------|--|-----------|
| <b>SECTION 1</b> | <b>Introduction .....</b>              | <b>1</b>  |
|                  | 1.1 What's in the box .....            | 1         |
| <b>SECTION 2</b> | <b>Installation and Setup .....</b>    | <b>2</b>  |
| <b>SECTION 3</b> | <b>Basic Operation.....</b>            | <b>6</b>  |
|                  | 3.1 Using the remote control .....     | 6         |
|                  | 3.2 Power .....                        | 7         |
|                  | 3.3 Selecting an input source .....    | 8         |
|                  | 3.4 Working with on-screen menus ..... | 8         |
| <b>SECTION 4</b> | <b>Specifications .....</b>            | <b>15</b> |
| <b>SECTION 5</b> | <b>Troubleshooting .....</b>           | <b>17</b> |

**SECTION 1****Introduction**

This video monitor has a rugged metal construction and displays sharp and brilliant video by utilizing an active TFT LCD matrix. The high contrast ratio generates sharp, crisp lines and images. Also, the fast response time gives superior clarity for moving images, eliminating “ghosting”. Key features include:

- Built-in BNC, RCA, HDMI, S-Video and VGA inputs
- Built-in audio speakers
- High resolution: 1680 x 1050 (LCD22W-7), 1440 x 900 (LCD19W-7), 1280 x 1024 (LCD19-5 and LCD17-5) pixel display
- Remote control

**1.1 What’s in the box**

Your monitor includes the following:

- LCD monitor and base
- User manual (this document)
- Power cord
- 6' VGA cable
- Audio cable with stereo mini-jack connectors
- Remote control




### SECTION 2

## Installation and Setup

To install the monitor:

1. Remove the components from the packaging and inspect them for damage. If the monitor is damaged in any way, return it to your supplier for replacement.
2. Find the monitor assembly and base. Use the screw provided to attach the base to the monitor support bracket. The screw may be attached to the underside of the monitor support bracket or in the base.

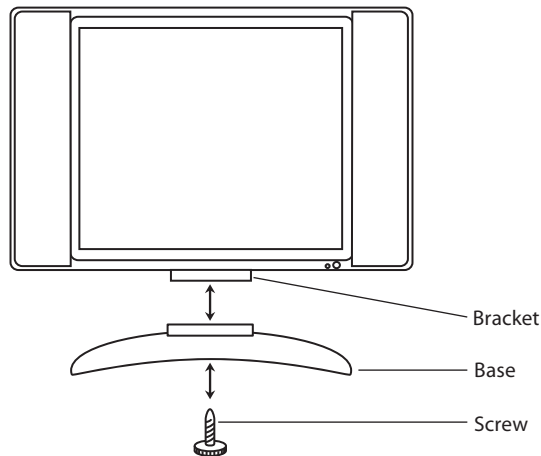


3. Connect your video source to the monitor input that provides the best video quality. This monitor connects directly to five types of video interfaces: HDMI, VGA, S-Video, composite video (RCA), and BNC. The HDMI, VGA, S-video, and composite video connectors are located on the lower back side of the monitor.



**Inputs on the lower back side of monitor**

BNC connectors are located on the back left side of the monitor underneath the back cover. Remove the cover by carefully pulling the lower edge of the cover away from the monitor.

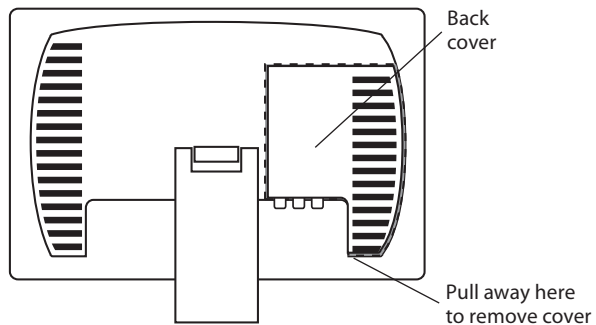

**Monitor back cover**

Removing the cover opens access to the BNC input and output connectors and their associated audio jacks.



**Inputs on the back left side of the monitor**

4. If necessary, configure the video source (DVR, PC, etc) to enable video (and audio) to the video output you are using.
5. Connect the audio output from the video source to the audio connector(s) associated with the monitor video input port you are using.
6. If needed, connect the monitor video output (BNC) and audio output (RCA) to a video input device. (See photo above.)
7. Connect the power cable to the monitor , then plug it into a grounded power outlet.
8. Press the **POWER** button to power on the monitor. The **POWER** button is located in the control panel on the right side of the monitor.





**Control panel**

9. Configure the monitor for the video input source you are using. Refer to **Section 3: Basic Operation** for more information.




## SECTION 3

## Basic Operation

## 3.1 Using the remote control

Monitor functions that can be performed on the control panel can also be done with the remote control. The buttons on the remote control are described below.

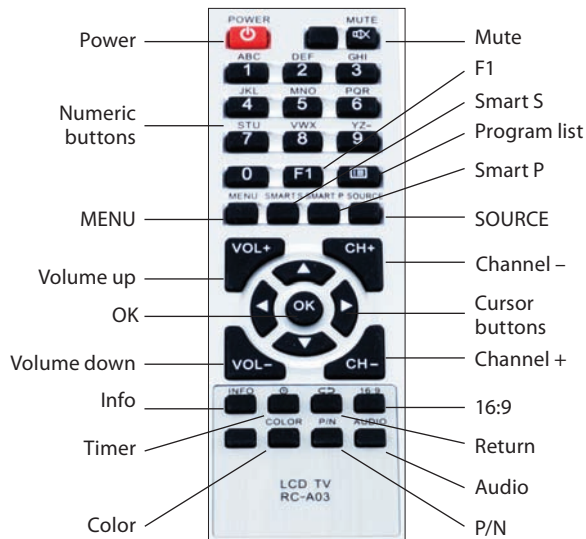**NOTE**

The function of buttons on the remote control depend on the display source selected. For instance, if the video input source selected is PC, the monitor will ignore the numeric buttons and other buttons unrelated to that input source.

Table 1. Remote control button functions

| Button | Function                   |
|--------|----------------------------|
| Power  | Turn on or standby         |
| Info   | Display system information |
| Mute   | Silence audio              |
| Timer  | Time setting button        |



| Button                  | Function   |
|-------------------------|--|
| Numeric buttons (0 – 9) | Enter number buttons   |
| Program list            | Scan or set program list   |
| F1                      | Not used.  |
| Cursor                  | Up or down cursor button: function select; left or right cursor button: add or reduce                              |
| OK                      | Confirm selection  |
| <b>CH +/–</b>           | Add or delete channel number   |
| <b>VOL +/–</b>          | Sound volume up (+) or down (–) buttons  |
| Menu                    | Display menu   |
| Source                  | Display source selection menu  |
| SMART S                 | Intelligent sound mode selection   |
| SMART P                 | Intelligent video mode selection. Select from PERSONAL, SOFT, ADVANCED, or STANDARD preset video image adjustments |
| Return                  | Return to previous channel   |
| Smart image             | Intelligent image mode select  |
| 16:9                    | Switch between Full, ZOOM, ZOOM2, NORMAL, or PANORAMA  |
| info                    | Return to previous channel   |
| Timer                   | Set sleep timer to 15, 30, 45, or 60 minutes   |
| Color                   | Select color tone: NORMAL, WARM, COOL  |
| P/N                     | Not used   |

## 3.2 Power

### 3.2.1 Power On

The monitor can be powered on in two ways:

- Press the  button on the on the monitor control panel.
- Press the **Power** button on the remote control.

### 3.2.2 Standby mode


When the monitor is not in use, press the **Power** button on the remote control to put the monitor in standby mode. When the monitor is in standby, the front panel power LED is red.

**NOTE**

The monitor will change to standby mode if it is powered on and there is no signal input for 5 minutes, or when the preset time to turn off is reached.

### 3.3 Selecting an input source


Press **SOURCE** on either the remote control or the monitor to open the INPUT SOURCE pop-up window.

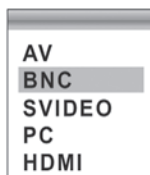

Then press the up, ▲, or down, ▼, cursor keys on remote control or on the monitor to select the video input interface. Input interfaces are AV (RCA, composite video input), BNC, S-VIDEO, PC (VGA input), and HDMI. Press the **OK** button on the remote control or **MENU** button on the control panel to switch to the highlighted video input. An on-screen confirmation will appear.

### 3.4 Working with on-screen menus

Press **MENU** on the remote control or on the monitor control panel to open the monitor configuration menus. Initially, the monitor displays the PICTURE menu screen. Options listed on the menu screens may differ from those shown herein depending on the selected video source.

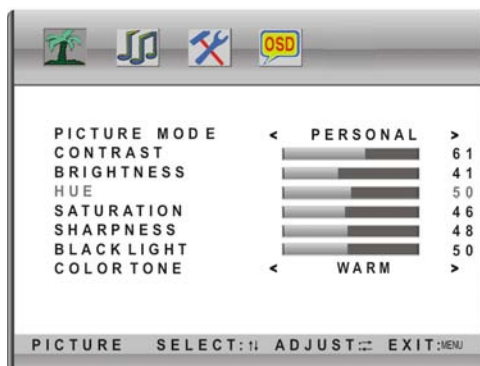

PICTURE menu



1. Press the left, ◀, or right, ▶, cursor keys on the remote control, or the + or – buttons on the monitor control panel to select one of four menu screens: **PICTURE**, **SOUND**, **ADVANCED**, or **SYSTEM**.
2. Press the down, ▼, cursor keys on the remote control or the – button on the monitor control panel to change settings on the menu screen you selected, press **MENU** again to close the menu screen.

### 3.4.1 PICTURE menu

Use the PICTURE menu to adjust the image contrast, brightness, and other attributes of the image displayed on the screen. One of four modes can be selected: PERSONAL, which allows you to set image attributes individually, and SOFT, DYNAMIC and STANDARD, which provide factory preset attributes levels. Additionally, in each of the four modes the attribute COLOR TONE can be set to COOL, NORMAL or WARM color temperatures.

To adjust the image attributes, do the following:

1. Press **MENU** on the remote control or on the monitor control panel. The monitor will display the PICTURE menu screen.
2. Press the down, ▼, cursor key on the remote control or monitor to select PICTURE MODE options. When an option is selected, it is highlighted.
3. With PICTURE MODE selected, press the left, ◀, or right, ▶, cursor keys on the remote control, or the + or – buttons on the monitor control panel to select one of four picture modes: PERSONAL, STANDARD, DYNAMIC, or SOFT. As you step through the preset menus, the picture changes to reflect the attribute set by the mode selected. Choose the picture mode that best satisfies your needs.
  - If you select STANDARD, DYNAMIC, or SOFT, you can change only the COLOR TONE option.
  - If you select PERSONAL, you can set the CONTRAST, BRIGHTNESS, HUE, SATURATION, SHARPNESS, BLACKLIGHT, and COLOR TONE individually.

**NOTE** *On systems displaying NTSC video, the HUE option is not available.*

4. Press the up, ▲, or down, ▼, cursor keys on the remote control or on the monitor control panel to select the attribute you want to adjust. After selecting the attribute, use the left, ◀, or right, ▶, cursor keys on the remote control or the + or – buttons on the monitor control panel to change the setting of the attribute. Repeat this step for the other attribute(s) you want to change.
5. Press **MENU** again to save your settings and exit menu mode.


**Table 2. PICTURE menu option summary**

| Option       | Function                                  | Description  |
|--------------|---|--|
| PICTURE MODE | Select picture mode                       | STANDARD, DYNAMIC, SOFT, or PERSONAL   |
| CONTRAST     | Adjust the image contrast                 | Increasing the value increases contrast; decreasing the value decreases contrast (0-100)                 |
| BRIGHTNESS   | Adjust brightness and blackness the image | Increasing the value increases brightness; decreasing the value decreases brightness (0-100)             |
| HUE          | Adjust the hue of the image               | Increasing the value increases green; decreasing the value increases purple (0-100)                      |
| SATURATION   | Adjust the color saturation of the image  | Increasing the value increases color saturation; decreasing the value decreases color saturation (0-100) |
| SHARPNESS    | Adjust the sharpness of the image         | Increasing the value increases definition; decreasing the value decreases definition (0-100)             |
| BLACKLIGHT   | Adjust the black light of the image       | Increasing the value increases black light; decreasing the value decreases black light (0-100)           |
| COLOR TONE   | Adjust the color tone of the image        | NORMAL, WARM, COOL color temperatures  |

### 3.4.2 SOUND menu

Use the SOUND menu to adjust the audio bass, treble, and balance. One of four sound modes can be selected: PERSONAL mode, which allows you to set bass, treble and balance, and STANDARD, NEWS, and MUSIC modes that have fixed levels for bass and treble, but allow you to set the balance.

Volume is not adjusted within a menu. Use the **VOL+** and **VOL-** buttons on the remote control and the **+** and **-** buttons on the monitor control panel to adjust the volume level.

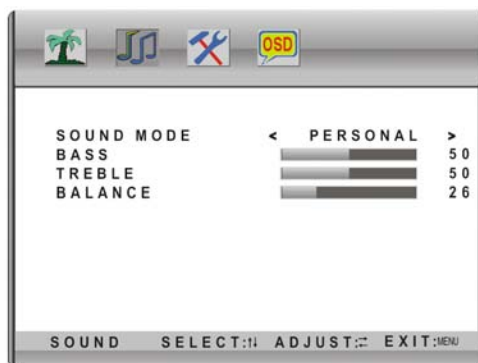**SOUND menu**



To modify the sound parameters, do the following:

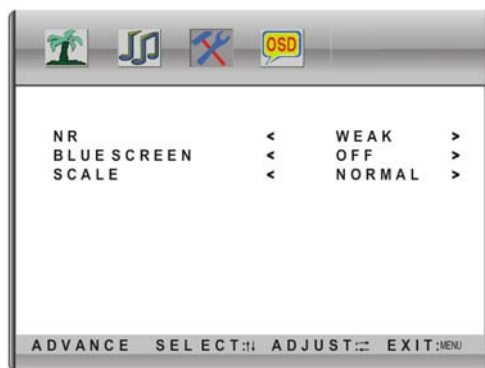
1. Press **MENU** on the remote control or on the monitor control panel. The monitor will display the PICTURE menu screen.
2. Press the right, **▶**, cursor key on the remote control or the **+** button on the monitor once to open the SOUND menu.
3. Press the down, **▼**, cursor key on the remote control or the monitor to select the SOUND MODE. When an option is selected, it is highlighted.
4. With SOUND MODE selected, press the left, **◀**, or right, **▶**, cursor keys on the remote control or the **+** or **-** buttons on the monitor to select one of four sound modes, PERSONAL, MUSIC, NEWS, or STANDARD. As you step through the preset menus the sound tonal quality and balance change to reflect the mode settings. Choose the sound mode that best satisfies your needs.
5. Press up, **▲**, or down, **▼**, cursor keys or the remote control or the monitor control panel to select a sound attribute you want to adjust. After selecting the attribute, use the left, **◀**, or right, **▶**, cursor keys on the remote control or the **+** or **-** buttons on the monitor control panel to change the setting of the attribute. Repeat this step for other options you want to change.
6. Press the **MENU** button again to save your settings and exit the menu mode.

**Table 3. SOUND menu option summary**

| Option     | Function  | Description   |
|------------|---|---|
| SOUND MODE | Select audio sound affect mode                            | PERSONAL, STANDARD, NEWS, or MUSIC modes  |
| BASS       | Adjust bass level   | Increasing value increases bass; decreasing value decreases bass (0-100)                |
| TREBLE     | Adjust treble level                                       | Increasing value increases treble; decreasing value decreases treble (0-100)            |
| BALANCE    | Adjust the balance between left and right channel volume. | Increasing value decreases left volume; decreasing value decreases right volume (0-100) |

### 3.4.3 ADVANCE menu

Use the ADVANCE menu to set noise reduction (NR) level, screen background, and zoom/aspect ratio. This menu is not available when the input source is PC (VGA) or HDMI.

**ADVANCE menu**

To adjust the ADVANCE parameters, do the following:

1. Press **MENU** on the remote control or on the monitor control panel. The monitor will display the PICTURE menu screen.
2. Press the right, ►, cursor key on the remote control or the + button on the monitor twice to open the ADVANCE menu.
3. Press the down, ▼, cursor key on the remote control or the monitor control panel to select the NR option. When an option is selected, it is highlighted.
4. With NR selected, press the left, ◀, or right, ▶, cursor keys on the remote control or the + or – buttons on the monitor to select either WEAK, STRONG, or OFF. As you step through different levels the display changes to reflect the NR level selected.
5. Press the up, ▲, or down, ▼, cursor keys or the remote control or the monitor control panel to select another option. After selecting the option, use the left, ◀, or right, ▶, cursor keys on the remote control or the + or – buttons on the monitor control panel to change the setting. Repeat this step for other settings you want to change.
6. Press **MENU** again to save your settings and exit the menu mode.


**Table 4. ADVANCE menu option summary**

| Option      | Function   | Description  |
|-------------|--|--|
| NR          | Adjust noise reduction                               | WEAK, MIDDLE, STRONG, or OFF modes                                       |
| BLUE SCREEN | Set “no signal” / background screen to blue or black | Blue ON or OFF   |
| SCALE       | Adjust the picture scale and aspect ratio            | FULL, ZOOM, ZOOM2, NORMAL, or PANORAMA (not used with all input sources) |



### 3.4.4 SYSTEM menu

Use the SYSTEM menu to setup the attributes of the menu display and to reset the monitor settings to the factory default values.

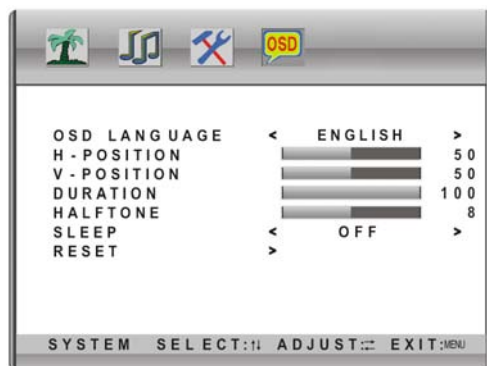

**SYSTEM menu**

To adjust the SYSTEM parameters, do the following:

1. Press **MENU** on the remote control or on the monitor. The monitor will display the PICTURE menu screen.
2. Press the left, ◀, cursor key on the remote control or the – button on the monitor control panel to open the SYSTEM menu.
3. Press the down, ▼, cursor key on the remote control or the monitor to select the OSD LANGUAGE option. When an option is selected it is highlighted.
4. With OSD LANGUAGE selected, press the left, ◀, or right, ▶, cursor keys on the remote control or the + or – buttons on the monitor control panel to select one of several menu languages. As you click through the different languages, the menu language changes to reflect the selection.
5. Press up, ▲, or down, ▼, cursor keys on the remote control or on the monitor to select another option. After selecting the option, use the left, ◀, or right, ▶, cursor keys on the remote control or the + or – buttons on the monitor to change the setting. Repeat this step for other options you want to change.
6. Press **MENU** again to save your settings and exit the menu mode.

**Table 5. SYSTEM menu option summary**

| Option       | Function                                   | Description  |
|--------------|--|--|
| OSD LANGUAGE | Select menu language                       | Select menu language – English, French, Chinese, Turkish, etc.                 |
| H-POSITION   | Adjust horizontal position of menu display | Increasing value, menu moves right; decreasing value, menu moves left (0-100)  |
| V-POSITION   | Adjust vertical position of menu display   | Increasing value, menu move down; decreasing value, menu move up (0-100)       |
| DURATION     | Set duration of menu                       | Increasing the value lengthens the duration of menu display (0 – 100)          |
| HALFTONE     | Adjust screen halftone level               | Increasing value increases halftone; decreasing value decreases halftone (0-8) |
| SLEEP        | Set sleep timer                            | Options are OFF, 15, 30, 45, 60 (minutes)                                      |
| RESET        | Reset menu settings to factory default     |  |



## SECTION 4

# Specifications

**Table 6. Video interface specifications\***

| Interface             | Specification   |
|-----------------------|---|
| HDMI (optional)       | Video signal: 1080p, 1080i, 720p, 576p, 576i, 480p, 480i<br>Audio: LPCM 48KHz, 44.1KHz, 32KHz, 24-bit, 20-bit, 16-bit |
| VGA                   | DB-15, 75 $\Omega$ , 0.5 ~ 0.7 Vp-p, H.V: TTL level (support mode, refer to VGA input mode)                           |
| S-Video Input         | Y: 75 $\Omega$ 1 Vp-p, C: 75 $\Omega$ 0.286 Vp-p  |
| BNC/CVBS Input/Output | Y: 75 $\Omega$ , 1 Vp-p   |
| Audio Input/Output    | 20 K $\Omega$ , 0.5 Vp-p  |
| Earphone              | 16 ~ 300 $\Omega$ , 100 mW + 100 mW   |

**Table 7. PC (VGA) input resolutions: LCD17-5, LCD19-5 monitors\***

| Mode | Resolution         | Refresh (Hz) |
|------|--------------------|--------------|
| VGA  | 720 $\times$ 400   | 70           |
|      | 640 $\times$ 480   | 60           |
| SVGA | 800 $\times$ 600   | 60           |
| XGA  | 1024 $\times$ 768  | 60           |
|      | 1280 $\times$ 960  | 60           |
|      | 1152 $\times$ 864  | 75           |
| SXGA | 1280 $\times$ 1024 | 60**         |

**Table 8. PC (VGA) input resolutions: LCD19W-7 monitor\***

| Mode | Resolution        | Refresh (Hz) |
|------|-------------------|--------------|
| VGA  | 720 $\times$ 400  | 70           |
|      | 640 $\times$ 480  | 60           |
| SVGA | 800 $\times$ 600  | 60           |
| XGA  | 1024 $\times$ 768 | 60           |
| WXGA | 1280 $\times$ 768 | 60           |
|      | 1440 $\times$ 900 | 60**         |

**Table 9. PC (VGA) input resolutions: LCD22W-7 monitor\***

| Mode | Resolution  | Refresh (Hz) |
|------|-------------|--------------|
| VGA  | 720 × 400   | 70           |
|      | 640 × 480   | 60           |
| SVGA | 800 × 600   | 56, 60       |
| XGA  | 1024 × 768  | 60           |
|      | 1280 × 960  | 60           |
| SXGA | 1280 × 1024 | 60           |
|      | 1680 × 1050 | 60**         |

**Table 10. General specifications\***

| Item                    | LCD17-5                                    | LCD19-5                                      | LCD19W-7  | LCD22W-7                                       |
|-------------------------|--|--|---|--|
| Resolution (maximum)    | 1280 x 1024 @ 60 Hz                        |  | 1440 x 900 @ 60 Hz  | 1680 x 1050 @ 60 Hz                            |
| Pixel pitch             | 0.264 x 0.264 mm                           | 0.294 x 0.294 mm                             | 0.2835 x 0.2835 mm, or<br>0.285 x 0.285 mm  | 0.282 x 0.282 mm                               |
| Active area             | 13.30 x 10.64 in<br>(337.92 x 270.34 mm)   | 14.82 x 11.85 in<br>(376.32 x 301.06 mm)     | 16.07 x 10.05 in<br>(408.24 x 255.15 mm) or<br>16.16 x 10.10 in<br>(410.4 x 256.5 mm) | 18.65 x 11.66 in<br>(473.76 x 296.10 mm)       |
| Colors                  | 16.7 M                                     |  |   |  |
| Surface                 | Anti-glare                                 |  |   |  |
| Audio volume            | 3 W + 3 W                                  |  |   |  |
| Air pressure            | 86 kPa ~ 104 kPa                           |  |   |  |
| Temperature (operating) | 41°F ~ 104°F (5°C ~ 40°C)                  |  |   |  |
| Temperature (storage)   | -4°F ~ 131°F (-20°C ~ 55°C)                |  |   |  |
| Humidity (operating)    | 10% ~ 85%                                  |  |   |  |
| Humidity (storage)      | 5% ~ 95%                                   |  |   |  |
| Power consumption***    | 40 W (on), < 2 W (standby)                 | < 45 W (on), < 2 W (standby)                 |   |  |
| Size (L x W x H)        | 19.5 x 5.4 x 2.4 in<br>(496 x 390 x 62 mm) | 20.1 x 16.9 x 2.76 in<br>(510 x 430 x 70 mm) | 20.47 x 14.84 x 2.99 in<br>(520 x 377 x 76 mm)  | 23.11 x 16.34 x 3.03 in<br>(587 x 415 x 77 mm) |
| Net Weight              | 13.23 lbs (6.0 Kg)                         | 15.43 lbs (7.0 Kg)                           | 14.33 lbs (6.5Kg)   | 15.43 lbs (7.0 Kg)                             |
| Gross Weight            | 16.54 lbs (7.5 Kg)                         | 19.84 lbs (9.0 Kg)                           | 17.64 lbs (8.0 Kg)  | 19.84 lbs (9.0 Kg)                             |
| Remote control range    | < 26.2 ft (< 8 m) ± 30°                    |  |   |  |

\* These specifications are subject to change without notice.

\*\*Recommended mode

\*\*\* Power supply complies with EPA standards and is compatible with the VESADPMS standard.



## SECTION 5

**Troubleshooting****Q My monitor has no image or sound. How can I fix this problem?**

**A** It may be that the power source is bad, or the power connections are loose. Check the power cord to make sure it is connected. Also, try to power on the monitor using both the button on the monitor and the button on the remote control.

**Q The monitor display is black and white (no color). Why?**

**A** The color saturation setting of the monitor may be too low. Use the PICTURE menu to increase the saturation level setting.

**Q I have a picture on the monitor but no sound. Is there an adjustment?**

**A** Yes, the volume setting may be too low. Also, check the connections from the audio source to the monitor.

**Q With a computer connected to the monitor, there is no display. Additionally, the LED is blinking. Why?**

**A** The cable from between the computer and the monitor may be loose or bad. Check the cable connections, or replace the cable.

**Q Why does the remote control only work when it is close to the monitor?**

**A** The receiver sensor on the front of the monitor may be covered or the batteries in the remote control may be weak. Ensure that the IR receiver on the monitor is clean and not blocked. Also, replace the batteries in the remote control with new ones.

**Q When I use the monitor with my computer why is the display faint?**

**A** The display settings of the monitor may be incorrect or the display mode is incorrect. Use the auto-adjustment function in the menu. Set the monitor to the optimal display setting.

**Q Why is the display small when I use the monitor with my computer?**

**A** The monitor configuration menu settings are incorrect. Open the SYSTEM menu and use the auto adjustment function. Set the monitor to the optimal display setting.

**Q My monitor makes noise when I turn it off. Is this normal?**

**A** Yes. This is usually caused by an electrical release in the monitor circuitry.

**Q The image on my monitor is poor and unstable. What causes this to happen?**

**A** Room lighting, static electricity, and other external factors can disturb the image or cause it to be unstable. Try shutting off the monitor and disconnecting it from its power source for two minutes. Then reconnect it and power it on again.



*Don't let your monitor display the same pattern continuously. If a high contrast picture remains on the screen for a long time, the image may "burn" into the display, which usually dissipates after the monitor is shut off. In extreme conditions, a remnant of the prior image may remain on the display.*